CANOPY SYSTEM INSTALLATION

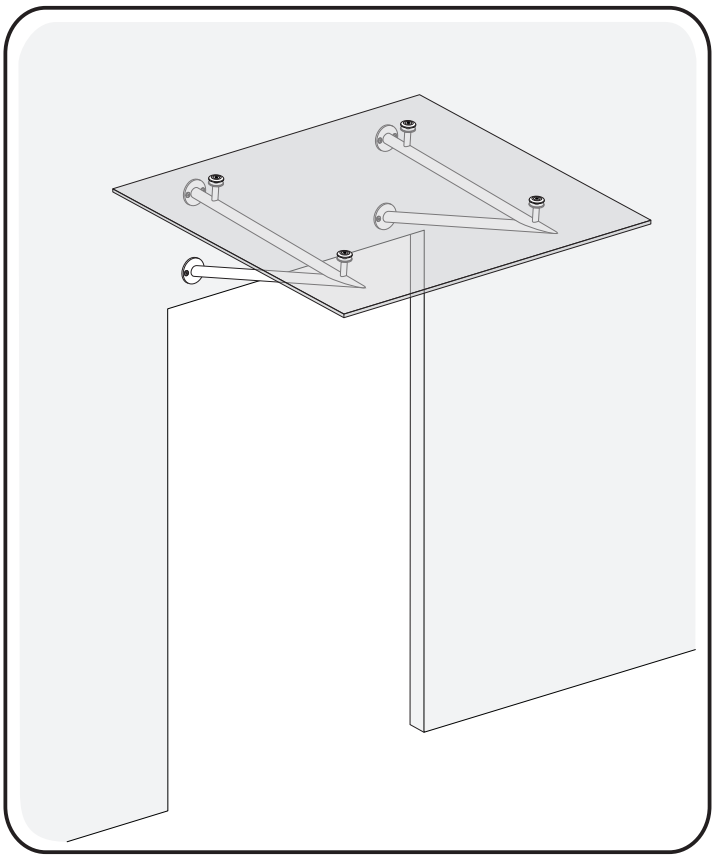

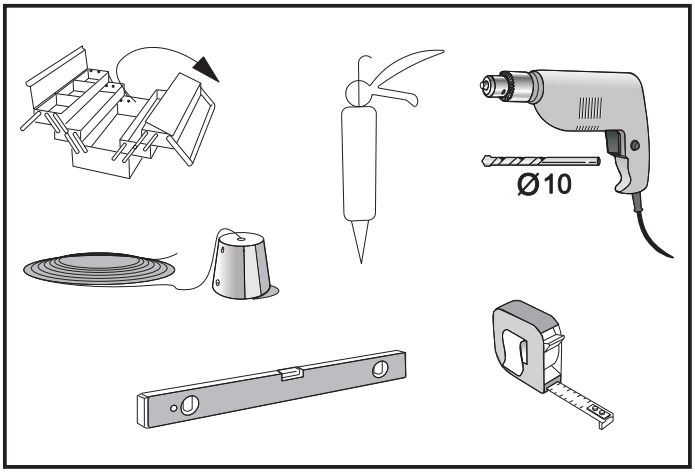

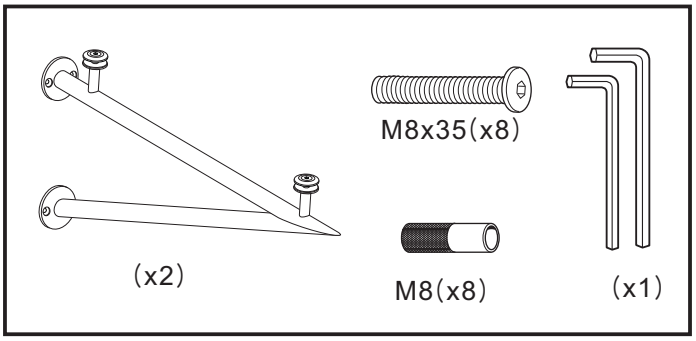

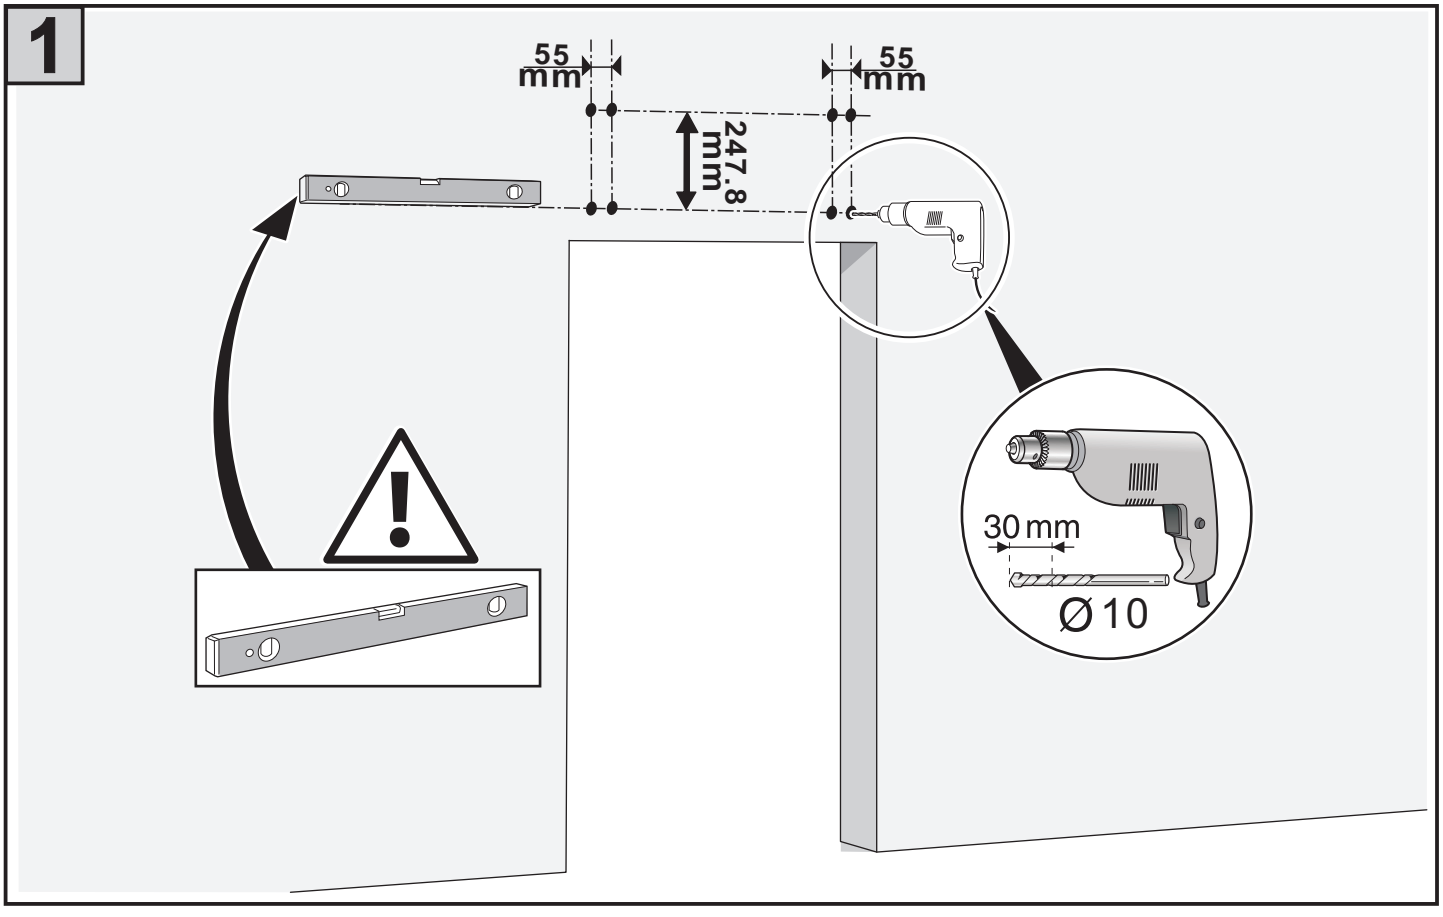

2

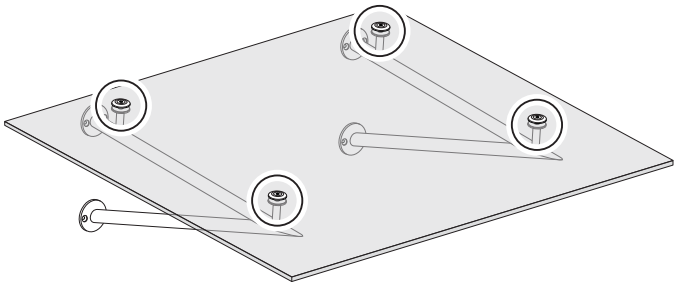

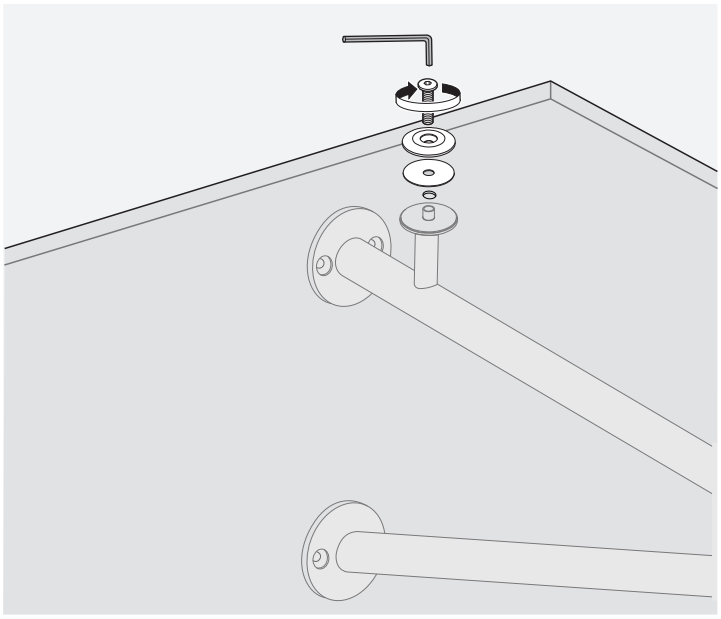

3

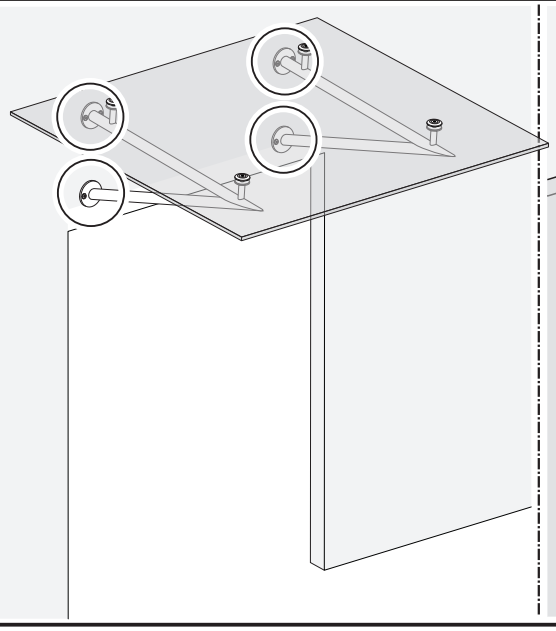

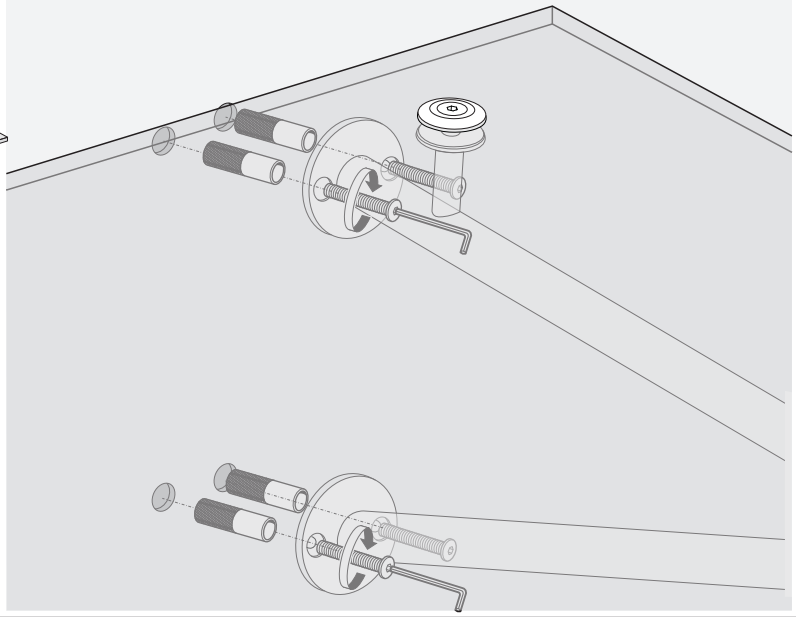
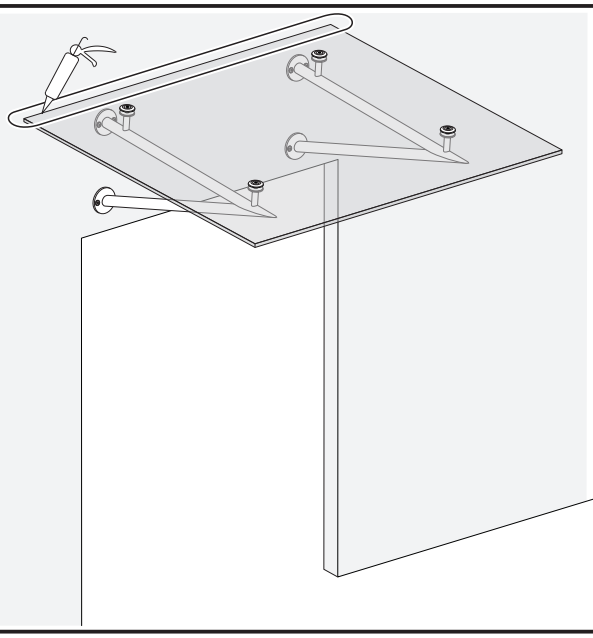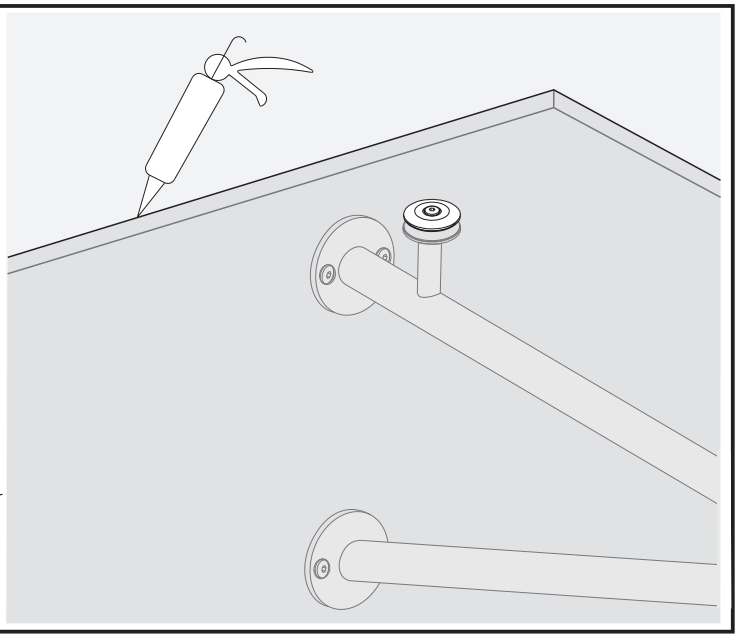
4